

Wireless Phase Comparator –WPC2000 Quick Reference Guide Operating Instructions

Proving Operation

Holding the units close to each other press both the **Receiver** (Blue coloured cone) and the **Transmitter** (Yellow coloured cone) buttons. RED LED's on both units Flash for about 5 Seconds RED LED's on both units Light Continuously & Receiver Green LED Flashes ON and OFF every 5 seconds and the Buzzer sounds when the Green LED is illuminated

OUT of PHASE



IN PHASE

HVOM0013-G1 AUTHOR: M.Clancy CHECK: D.Maxim

Transmitter Operation

When the Transmitter is connected to a Live HV Conductor via its contact electrode the unit switches ON, The **RED LED's** in the Transmitter Flash on/off and after about a 5 seconds arming phase the **RED LED's** light continuously. At this stage the internal radio module transmits phase information of the line to the receiver.



Receiver Operation

When the Receiver is connected to a Live HV Conductor via its contact electrode, the Receiver switches ON The **RED LED** in the Receiver Flashes on/off and after about a 5 seconds arming phase, the **RED LED** lights continuously the **GREEN Led** will light continuously and the **Buzzer** will

sound continuously and the **Buzzer** will sound continuously.



MANUFACTURED BY:

High Voltage Instruments Ltd.

15-16 Woodbridge Meadows, Guildford, Surrey, GU1 1BJ, United KingdomTelephone:01483 207428email:sales@hvil.com